


perma CLASSIC - Quick Start Guide

1. Predefine installation / Select lubricant, discharge period + connecting parts

Examples: Bearing lubrication



Direct mounting

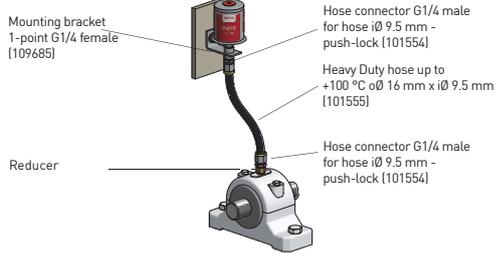

Remote mounting → for lube-points with vibration, limited mounting space, high temperature



Select a suitable lubricant for perma CLASSIC
→ e. g. perma Multipurpose grease SF01



Select activator screw
→ e. g. with perma SELECT Software




(refer to our product catalog for details)


2. Prepare lube-point




Clean lube-point

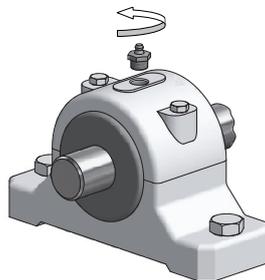


Remove grease fitting

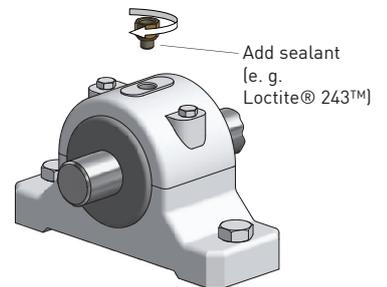


Add reducer and tubes (if required)

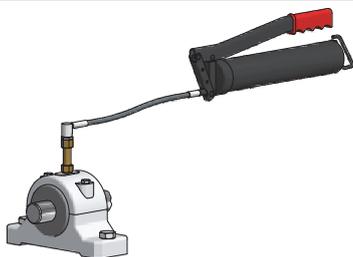

For direct mounting:
Prefill lube-point and any connecting parts
(use the same grease that is contained in the lubrication system)

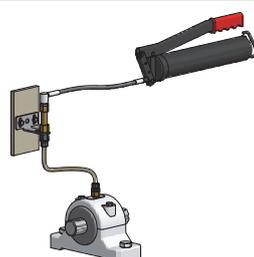

For remote mounting:
Prefill lube-point and any grease lines / connections
(use the same grease that is contained in the lubrication system)

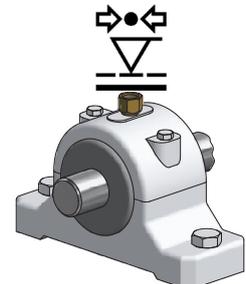

Pressure check: Lube-point / all connecting parts
(refer to perma CLASSIC installation guide for details)

3. Activation / Installation of lubrication system

